To buy: Contact Sylvane at 800-934-9194 or visit www.sylvane.com
For product support: Contact Winix at 877.699.4649

WINIX FresHome

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

WINIX Korea 35-1, Unjung-Dong, Bundang-gu, Seongnam-si, 463-440, South Korea
www.winixcorp.com **e-Mail** sales@winixinc.com **Tel** +82.31.701.1173(4574)

WINIX Inc 120 Prairie Lake Road, Unit E East Dundee, Illinois 60118
www.winixinc.com **e-Mail** info@winixinc.com **Tel** +1.847.551.9900

WINIX Europe 14 Cours de l'Intendance, 33000 Bordeaux, France
www.winixeu.com **e-Mail** info@winixeu.com **Tel** +33.556.448.572

Sep. 2012

WINIX FresHome

User Manual

WINIX Air Washer

Model : AW107

Thank you for purchasing this WINIX product

Read and follow all safety rules and instructions before operating this equipment.
Please keep this manual for future reference.

FEATURES

2-in-1 Air Treatment
The Winix FresHome Air Washer gently and safely captures odors and impurities while gently humidifying the air.

Auto Mode
A sensor continually monitors the environment and adjusts the performance for optimal humidity levels.

Cleancel™ Anti-Microbial Coating
The Winix Air Washer is treated with Cleancel™ to prevent the growth of odor causing bacteria and microbes on the cleanable humidifying collection discs.

Auto Sleep Mode
The Winix Air Washer will automatically dim the display lights and operate at lowest speed to not disturb sleep.

Auto Shut-Off
WINIX Air Washer shuts off automatically when the water bucket is low.

Plasma Wave™ Technology
Attacks pollutants at the molecular level to neutralize viruses, bacteria, chemical vapors, odors and gases in the air leaving the Air Washer.

Read all instruction: Important Safeguards

When using electrical appliances, especially when children are present basic safety precautions should always have followed, including the following:

1. Always have water in the water tank when operating unit.
2. Use only clean, cool tap water to fill tank.
3. Use only 100~120V AC outlet. As with any electrical device, plug and unplug unit with dry hands only. Turn unit off prior to unplugging it. Unplug unit when not in use and before you clean or move the unit.
4. This unit shuts off automatically when water tank is empty.
5. Never operate unit with a damaged coed or plug. Keep cord straight.
6. Always place unit on an elevated (at least one(1)foot off the ground), flat, level surface away from direct sunlight. Keep cord away from heated surface and areas where it could be walked on or tripped over. Do not place on objects that are not resistant to water damage from spillage or moisture.
7. Do not titt or tip unit or attempt to empty or fill it while it is operating.
8. The unit should not be left unattended in closed rooms as air could become saturated and leave condensation on walls or furniture. Always leave room door partially open.
9. Do not tilt or tip unit or attempt to empty or fill while it is operating.
10. Replace demineralization cartridge every 2~3 months or more frequently as needed.

TABLE OF CONTENTS

FEATURES 1
Read all instruction 1
INTRODUCTION 3
SAFETY INSTRUCTIONS 3
PRODUCT AND PARTS VIEWS 7

PRODUCT INSTALLATION 9
SETTING UP YOUR AIR WASHER 9

PRODUCT OPERATION 10
BEFORE TURNING ON 10
AUTO MODE 12
SLEEP MODE 13
ADJUSTING FAN SPEED 13
EMPTYING WATER TANK 14

CARE AND MAINTENANCE 15
OUTER SURFACE 15
CLEANING PRE-FILTER 15
CLEANING ANTIMICROBIAL DISK AND WATER BUCKET 16
CLEANING THE UNIT 17
FAQs & TROUBLESHOOTING 19
SPECIFICATIONS 21

INTRODUCTION

WARNING:SAFETY INSTRUCTIONS

WARNING / NOTICE	DIRECTION
WARNING Follow these instructions to avoid any risk of personal injury, property damage, electrical shocks or fire hazards.	PROHIBITED DO NOT DISASSEMBLE
NOTICE Failure to follow the safety instructions can lead to personal injury or property damage.	Must Follow Ground connection protecting from electrical shock

Warning ▶Power Cord

DON'T unplug the unit by pulling on its power cord.

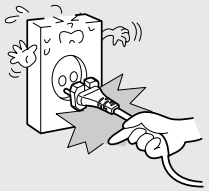

DON'T bend or place heavy object(s) on the power cord.

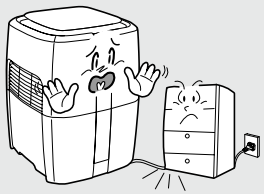

DON'T touch the plug with wet hands.

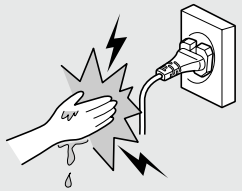

DON'T replace or modify the power cord.
If the power cord/plug is damaged, it must be replaced by the manufacturer or a qualified technician.

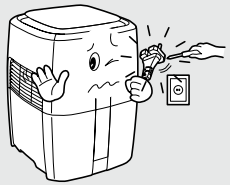

Warning ▶Power

DO connect the power cord to outlets with a ground connection ONLY.

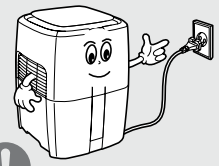

DO unplug air washer when not in use to save energy consumption.

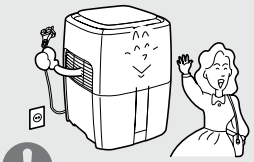

DON'T plug power cord into loose or damaged electrical outlet.
(Can lead to overheating or electrical shock.)

Warning ▶Operation

DO NOT attempt to repair, alter or disassemble the air washer.

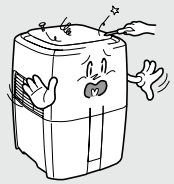

DON'T operate the air washer if standing water is present.

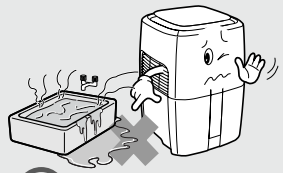

DON'T operate air washer on an uneven surface.

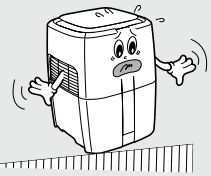

DON'T pour water into the top of the air washer, only place in water tank as directed.

DON'T operate air washer near flammable materials.

Note ▶Power

DON'T disconnect the power cord during operation.

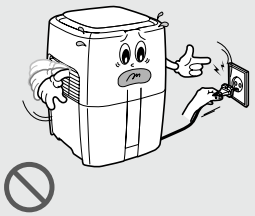

DO unplug the appliance during filling and cleaning.

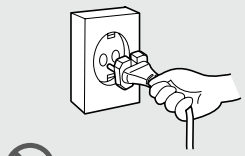

DO unplug the unit and contact your service dealer if any irregular noise or smoke occurs.

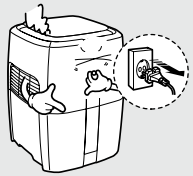

Note ▶Operation

DO use the air washer after assembling the Antimicrobial Disk.

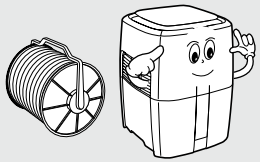

DON'T insert ANYTHING into the air inlet or outlet.

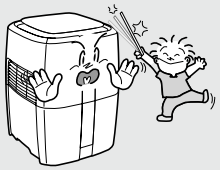

DON'T place the air washer near a heat source.

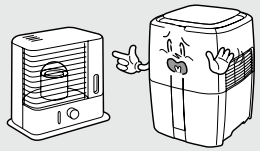

DON'T place hands or body parts near the air outlet during operation.

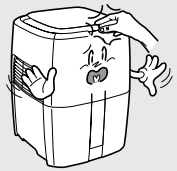

DON'T place the air washer near curtains or other materials that can cover the vents of the unit.

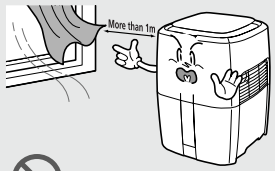

DON'T strike or drop the air washer.

Note ▶Operation

DON'T allow children to play on or near the air washer.

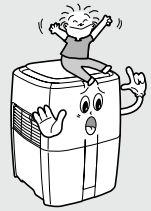

DON'T use hot water in the water tank.

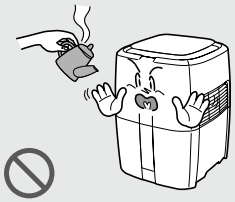

DO clean Antimicrobial disk regularly with warm tap water and allow to air dry.

Discs are top-rack dishwasher safe. Follow directions in the Care and Maintenance section.

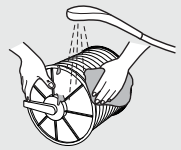

DON'T spray flammable liquids or gases into the unit.

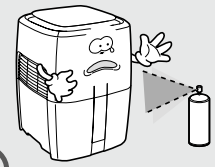

DON'T place air washer near your head when you sleep.

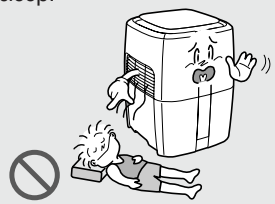

DO move the top cover and water bucket of the unit separately when moving air washer.

DON'T use flammable material (such as benzene or alcohol) to clean the air washer.

DON'T install the unit in direct sunlight or near inverter lighting or automatic sensor lights.

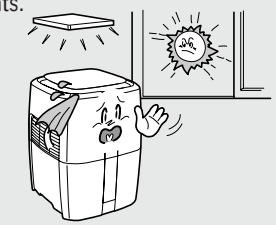

DON'T cover the top of the air washer during operation.

DO NOT spray liquids directly into air washer during cleaning.

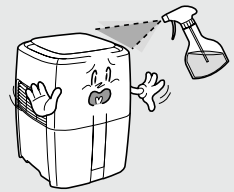

※ This appliance intended for adult use only.

PRODUCT AND PARTS VIEWS

Front

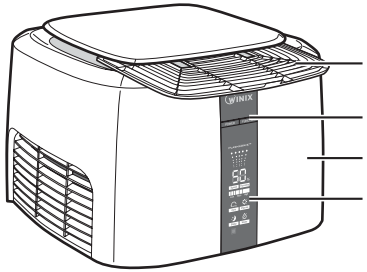

Pre-Filter

Power / Function Button

Top Cover

Display Panel

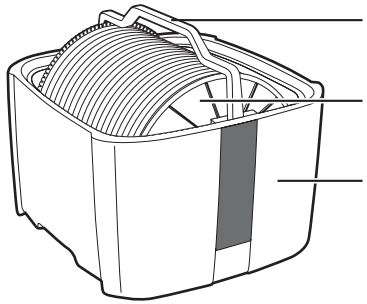

Disk Assembly Handle

Cleancel™ Antimicrobial Disks

Water Bucket

Back

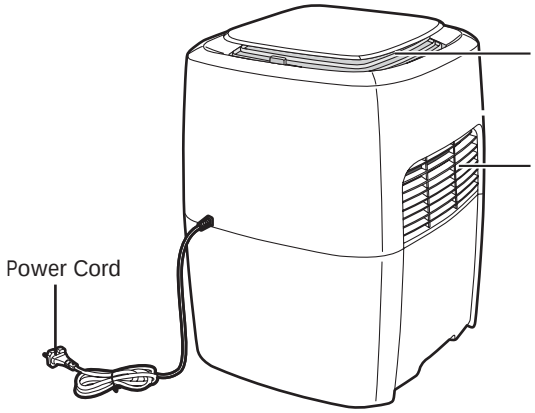

Air Inlet

Air outlet

Power Cord

Display Panel and Controls

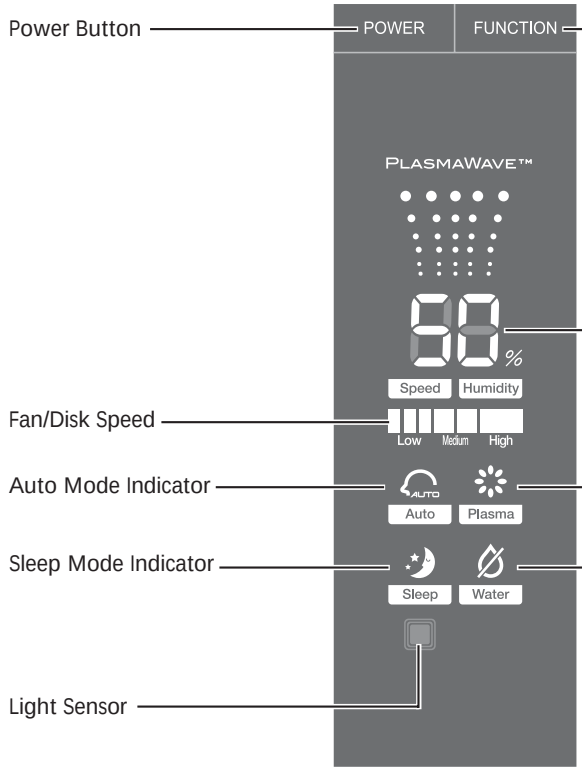

Power Button

Function Button:
Fan/Disk Speed (LOW → MEDIUM → HIGH), Sleep Mode, Auto Mode.

Current Humidity Level

Fan/Disk Speed

Auto Mode Indicator

PlasmaWave™ On/Off Indicator

Sleep Mode Indicator

Low Water Indicator

Light Sensor

PRODUCT INSTALLATION

SETTING UP YOUR AIR WASHER

SPACE SELECTION & INSTALLATION

For better performance and longer product life, please select an adequate space to install the unit.

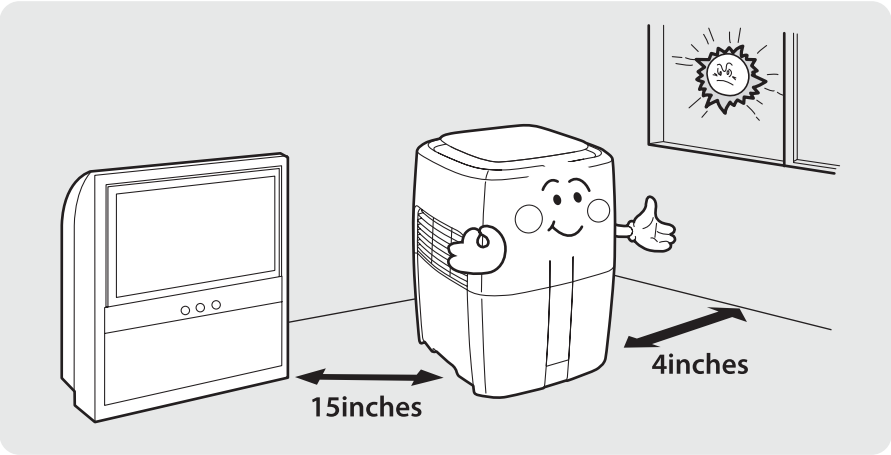

Do not install the unit under direct sunlight.
- Long Exposure to direct sunlight can cause defects.

Air Washer must be installed and operated on an even surface.
- Vibrations and noise can occur on soft or non-flat surfaces.

Products must be installed approximately 4 inches away from the wall and 15 inches from other electronic appliances.

Before operating the air washer, remove any plastic bags and polyfoams from outside and inside of the unit.

PRODUCT OPERATION

BEFORE TURNING ON

❶ Lift and remove top section of the air washer to open.

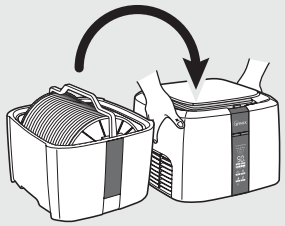

❷ Fill the water tank with cool tap water up to the indicator line on inside of the water tank. For optimal performance do not overfill.

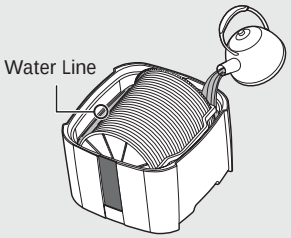

❸ Replace the top section of the air cleaner. Make sure that it is seated properly and lines up correctly.

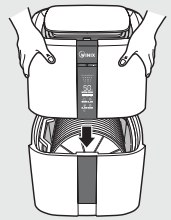

Cautions
- ▶Make sure to unplug the power cord before filling the water tank.
- ▶Hard water may cause operation defects. Please use filtered water if necessary.
- ▶Use caution when moving air washer with a full water tank, as it will be heavy.

❹ Plug the power cord into a power outlet.

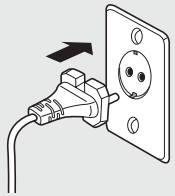

❺ Push POWER button.

❻ The air washer will start in Auto Mode and the PlasmaWave™ function will be ON. If the Low Water Indicator is on, refill the water bucket.

AUTO MODE

❶ Push FUNCTION button to select Auto mode.

- The FUNCTION button will cycle the unit between the following: LOW → MEDIUM → HIGH → SLEEP MODE → AUTO MODE.

❷ AUTO Mode Indicator will illuminate.

- Fan and disk speed will automatically adjust, according to chart below, for optimal humidity level of around 50%.

Humidity Range	Fan speed
More than 60%	LOW
From 50% to 59%	MEDIUM
Less than 50%	HIGH

❸ Push the POWER button to turn off.

- All lights will be off.

Operation

SLEEP MODE

Manual Sleep Mode

❶ Push FUNCTION button.
❷ Select Sleep Mode.
(Indicator light will illuminate)
❸ Sleep Mode will dim the display lights.
(Fan speed :low)

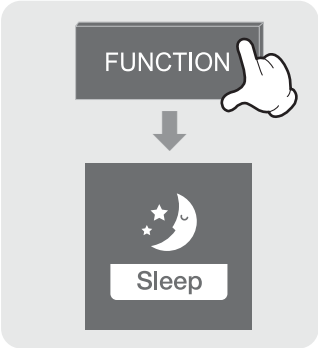

Auto Sleep Mode

● When in Auto Mode (see previous section), the light sensor will detect the light in the room and will turn on Sleep Mode when external light sources are dimmed.

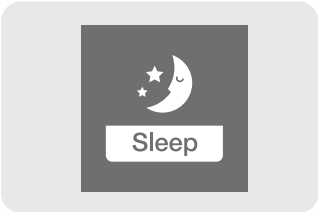

Adjust Fan/Disk Speed

● Push FUNCTION button to change Fan/Disk speed.
- The FUNCTION button will cycle the unit between the following: LOW → MEDIUM → HIGH → SLEEP MODE → AUTO MODE

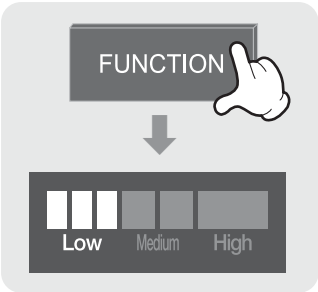

EMPTYING WATER TANK

❶ Remove the top cover the unit. Lifet the disk assembly by the handle and carefully remove it.

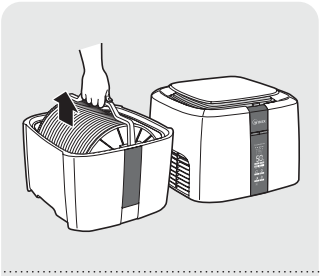

❷ Remove the use water left in the water tank and dispose of in an appropriate manner. Refill water tank. (do not fill past indicator line as directed)

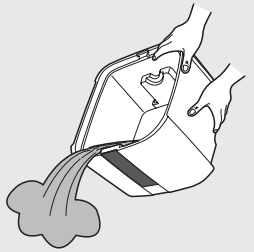

❸ Replace the disk assembly. Lay handle down flush with water tank. Carefully replace top section of air washer and assure proper alignment.

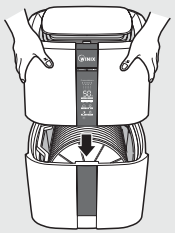

Cautions
▶Allows unplug the power cord when removing or adding water to the water tank.
▶If the air washer has not been used for an extended period of time, use fresh water to avoid performance issues.

CARE AND MAINTENANCE

OUTER SURFACE

● Clean the outside of the unit with a soft cloth and mild detergent. Wipe clean with a dry cloth.

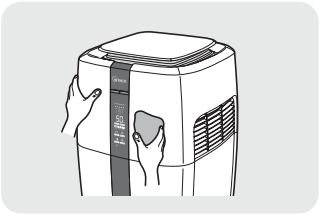

CLEANING PRE-FILTER

❶ Use the tab on each side of the prefilter and gently pull up and out from both sides.

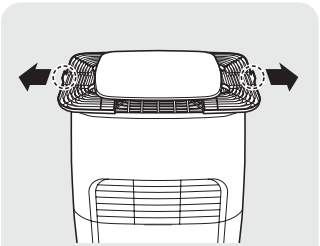

❷ Rinse pre-filter clean with warm tap water.

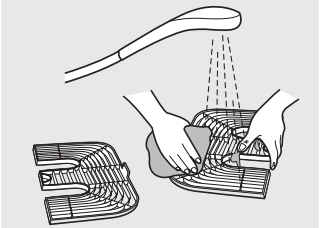

❸ Use tabs and slide pre-filter back into original position.

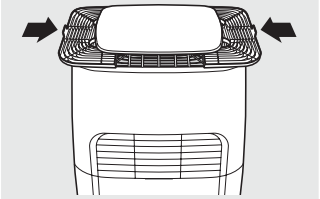

CLEANING ANTIMICROBIAL DISK AND WATER BUCKET

❶ Clean Antimicrobial Discs with warm tap water.

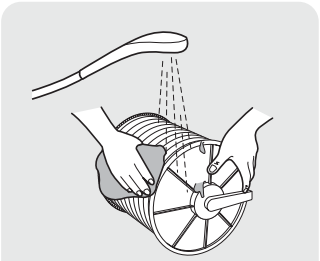

❷ Clean the inside of water bucket with a soft cloth and mild detergent.

- Clean the water bucket every week to prevent the growth of mold, germs, and bacteria.
- Refill the bucket with clean tap water.

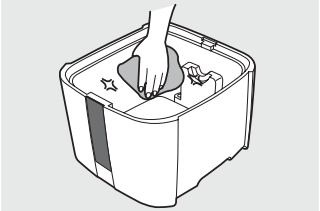

❸ Place Cleancel™ Antimicrobial Disk back into the bucket aligning with grooves and with handle laid flat.

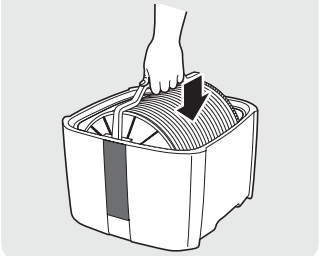

Cautions

- ▶Before cleaning air washer, unplug the power cord.
- ▶Don't use flammable materials such as benzene and alcohol to clean air washer.
- ▶If the air washer has not been used for more than two days, unplug the power cord and refill the water bucket with new water.
- ▶Always clean the antimicrobial discs and water bucket of the unit has not been used for an extended period of time to prevent contamination.

CLEANING THE UNIT

❶ Remove the top cover and place it upside down on an even surface.

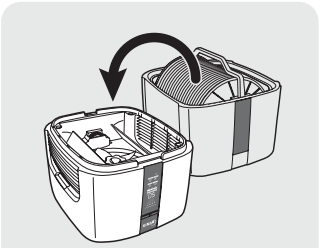

❷ Open venting guides until you hear them 'click'

❸ Remove the fan cover by turning the locking nut clockwise and lifting the fan up.

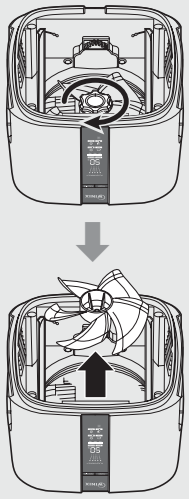

❹ Gently clean the inside of the housing with a soft cloth or vacuum cleaner attachment.

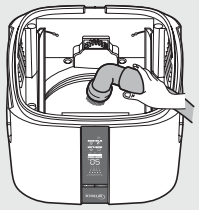

❺ Wash the fan with warm water. Use a soft cloth to wipe dry.

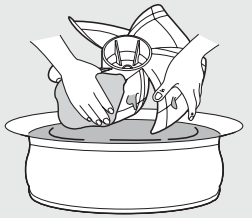

❻ Reassemble in reverse order after cleaning.

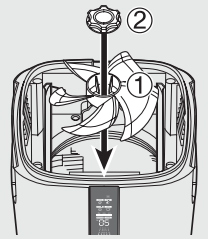

Cautions ▶Only the fan should be washed with water.

FAQs & Troubleshooting

Check if you can resolve issues before calling customer service.

Symptom	Check if:	Remedy:
Air washer does not turn on. 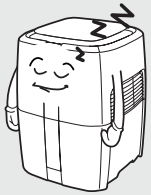	▶Power cord is plugged in. ▶Low Water Indicator light is on ▶Top and bottom sections are aligned.	▶Plug the power cord in. ▶Fill the the water tank. ▶Make sure the top and bottom of the air washer are lined up correctly.
Auto Mode is not working. 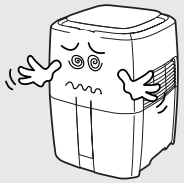	▶Power cord is plugged in. ▶Auto Mode Indicator is on. ▶Sensor is obstructed.	▶Plug the power cord in. ▶Push FUNCTION button to select Auto Mode. ▶Clean the sensor surface
Vibrates or makes a lot of noise.	▶The unit is located on an uneven surface.	▶Move to even surface.

Symptom	Check if:	Remedy:
Low air flow. 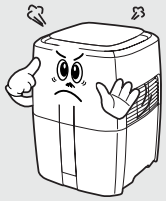	▶Water is too cold or icy. ▶Fan speed is on low level.	▶Use 68℉ to 77℉ temperature water. ▶Change to high fan speed.
Display panel light is too dark.	▶Protective film is still on. ▶Manual Sleep Mode is on. ▶Auto Sleep Mode is on.	▶Remove the film. ▶Use FUNCTION button to turn off Sleep Mode.
Unpleasant odors are present. 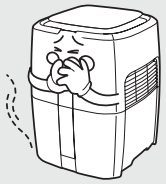	▶Air Washer is being used where strong odors and/or dust are present.	▶Replace the water in the water tank and change water more frequently.

SPECIFICATIONS

Model No.	AW107 (USA)	AW107 (EU)
Power Supply	110V / 60Hz	230V / 50Hz
Power Consumption	17W	17W
Humidifying Capacity	0.105gal / hour(33.8℉/30%)	400CC / Hour (20℃/30%)
For rooms up to	600 sq. ft.	600 sq. ft.
Tank(Max/Full)	2.64gal/2.11gal	10ℓ / 8ℓ
Weight	14.3lb	6.5kg
Dimension(WXDXH)	12.9In×12.9In×16.5In	330×330×420(mm)

Notes